



ADMIRAL VIDEO

InMotionHD

FiOPS Tablet Controller

Tablet Layout



Background

The FiOPS Tablet Controller is a tablet computer running the "Admiral Video FiOPS Controller" software. It provides a touch-friendly interface for control of Admiral Video FiOPS Systems.

The FiOPS Tablet Controller enables direct access to camera White Balance, Exposure, Color Gain, and Gamma controls without the need for navigating the camera menu system. It also enables access to camera OSD Menus for tweaking advanced settings.

Included Components

All components are marked with serial numbers.

Included are:

- 1) Zipper Case – All other components are stored inside
- 2) Tablet Computer with Folio Cover
- 3) Power Supply
- 4) Wireless Mouse
- 5) USB Control Cable

Tablet Basics

Charging

Connect the included power supply to the power port. The tablet must remain connected to the power supply. **If the power supply is disconnected, the tablet will automatically shut down.**

Powering Up

Press and hold the power button for approximately seven seconds until the screen turns on.

Powering Down

Press the power button. The tablet will shut down.

Using the Mouse

Turn the mouse on using the switch on the bottom of the mouse. The mouse will automatically pair with the tablet.

Accessing the On-Screen Keyboard

Tap the Keyboard icon in the lower right of the taskbar to open the On-Screen Keyboard.



Adjusting Screen Brightness

Slide your finger on the screen from the right edge of the screen towards the center of the screen to open the “Action Center.”

Tap “☀” to adjust brightness.



Preparing the FiOPS System

Configuring Camera ID Addresses

The FiOPS Controller supports two control ports (“Port A” and “Port B”), each of which can control up to six cameras, providing for a total maximum of twelve cameras. Port A can control up to six cameras with ID addresses 1 through 6 and Port B can control up to another six cameras with ID addresses 1 through 6.

The FiOPS Controller software integrates each group of cameras into one interface and once configured allows for seamless operation of all cameras.

DEFAULT NICKNUMBER	PORT	CAMERA ID ADDRESS
1	A	1
2	A	2
3	A	3
4	A	4
5	A	5
6	A	6
7	B	1
8	B	2
9	B	3
10	B	4
11	B	5
12	B	6

Connecting the Control Cable

Connect the USB cable to the tablet.

Connect the XLR end to the FiOPS Receiver (extend with a standard 3-pin XLR as needed).

Daisy chain any additional Receivers using XLR cables up to a total maximum of six Receivers.

FiOPS Controller Program

Opening the Program


Open “Admiral Video FiOPS Controller” using the shortcut on either the desktop or taskbar.

Settings Panel

Access the Settings Panel by tapping the Menu Icon in the upper left of the screen.



The Settings Panel will open. Tap the “X” to close the settings panel.

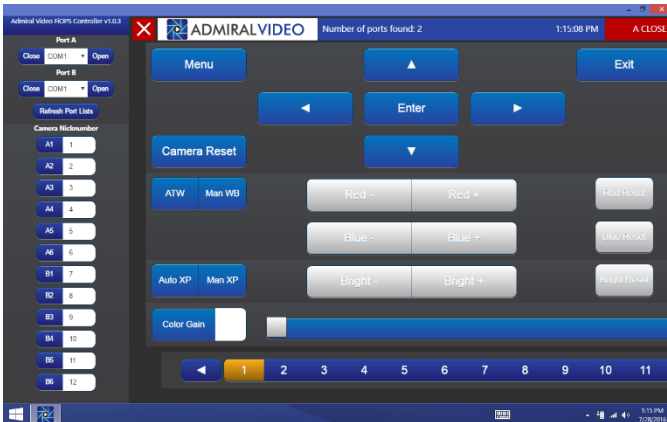

Activating a Control Port

Open the settings panel. Select a COM Port from the "Port A" list (usually COM3) and tap "Open" to open the port.



The Port Status Indicator will change from "A CLOSED" to "A OPEN" when the port successfully opens.



If a port is not displayed, check the USB cable connection to make sure the USB cable is connected and tap "Refresh Port Lists" in the settings panel.

Once the connection has opened, you can send commands to a camera. An indicator light on the USB cable will flash when a command is sent.

Controlling More Than Six Cameras – Activating a Second Port

Controlling more than six cameras requires an additional USB control cable, necessitating the use of a USB hub.

Connect a USB hub to the tablet. Connect two USB control cables to the hub. Connect the XLR end of each cable to respective FiOPS Receivers. Each control connection can be daisy chained using XLR cables to a total maximum of up to six Receivers each.

Open Port A in the standard manner described above. Then select a COM Port from the "Port B" list and Open the port. This must be a different port than you have selected as Port A. The Port Status Indicator will change from "B CLOSED" to "B OPEN" when the port successfully opens.

FiOPS Controller Program Operations

App Interface

In addition to providing camera OSD Menu access, the app provides direct access to White Balance, Exposure, Color Gain, and Gamma settings without the need to open the OSD Menu.

To access controls for additional cameras, use the Nav Bar at the bottom of the screen or swipe left or right on the display.

Known State

When the app opens, it is recommended that you set each camera to a Known State:

- Select ATW or Manual WB
- Select Auto or Manual Exposure
- Set Color Gain in one of three ways:
 - Press the "Color Gain" button. This will set the default value of 15.
 - Type a number in the box. Range is from 0 to 20.
 - Drag the slider. A command is only sent once you release the slider.
- Set Gamma


Camera Reset

As an alternative to setting each parameter individually, the “Camera Reset” button provides a way to quickly set the camera to a default Known State. This button will put the camera into ATW WB and Auto Exposure modes, set the default Color Gain value of 15, set Standard Gamma mode, and also reset any advanced settings that have been changed using the OSD Menu.

Camera Nicknumbers

Each camera can be given a Nicknumber up to three characters long.

Open the settings panel. Tap the input box for the desired camera and type a number. The Nav Bar at the bottom will update with the entered Nicknumber.

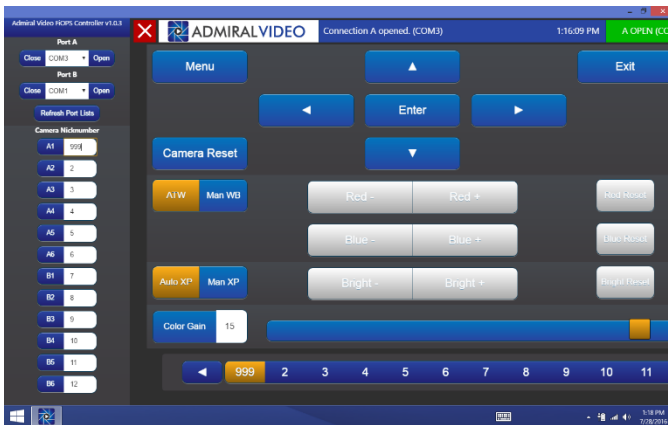

Nicknumbers are stored locally and will be remembered each time the app is opened. To reset a nicknumber, tap the button next to the camera’s nicknumber display.

Nicknumbers do not affect camera ID Addresses.

Clear All Menus

This button provides a quick way to exit the OSD Menu for all connected cameras.

Additional Notes

Supported Cameras

The FiOPS Tablet Controller and Admiral Video FiOPS Controller software have been tested with the following cameras:

Marshall CV502-MB

Marshall CV502-WPMB

Marshall CV505-MB

Additional Support

For additional support, contact Admiral Video.



ADMIRALVIDEO

InMotionHD

**© 2016 Admiral Video, LLC
503B Erie Street Lancaster, NY 14086
(716) 651-9900
PylonCam.com**

Version 1.0.3.1b 10/19/16